


SF Asennusohje
S Installation instruktioner
N Installationsinstruktioner
DK Installasjonsinstruktus
NL Installatievoorschrift
D Montageanweisung
F Instructions d'installation
ES Instrucciones de montaje
I Istruzioni di montaggio






ML6425A,B


Electric Linear Valve Actuator


INSTALLATION INSTRUCTIONS

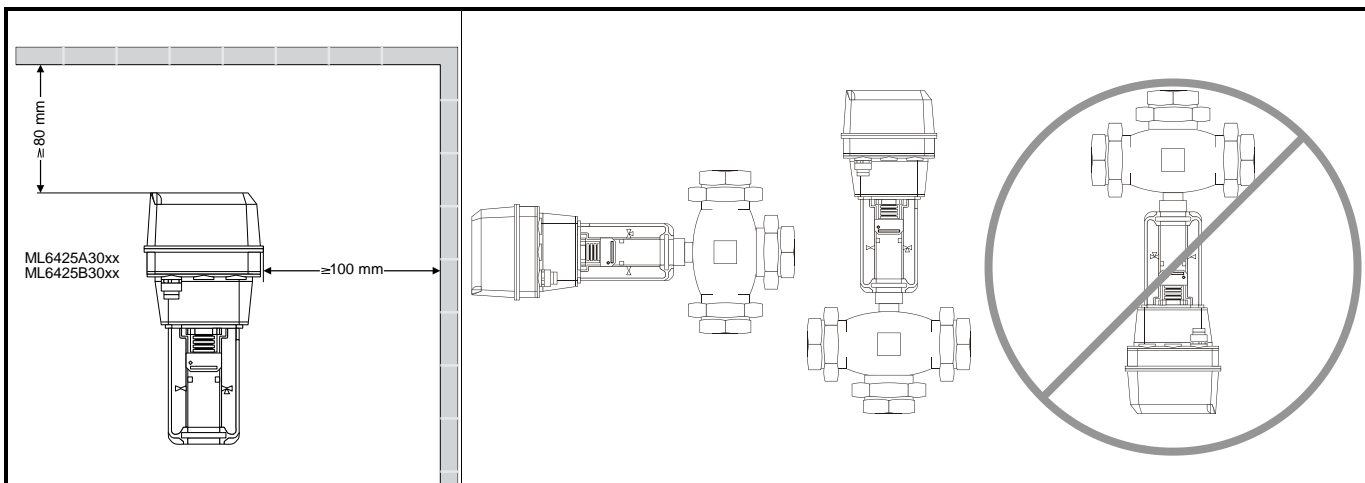

A1-A7: Installation

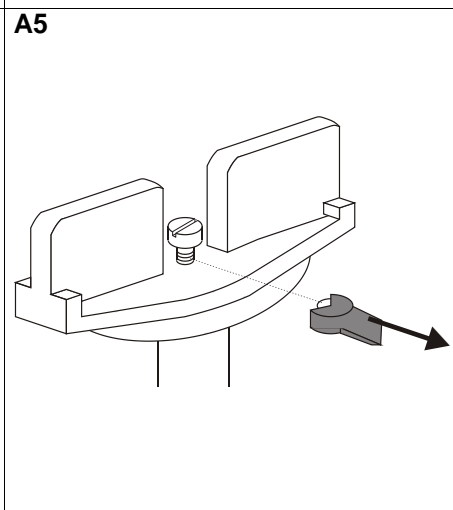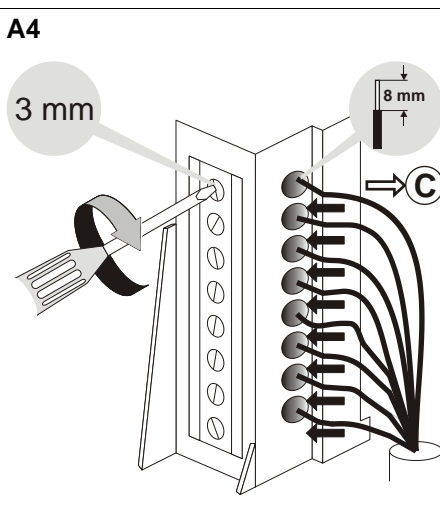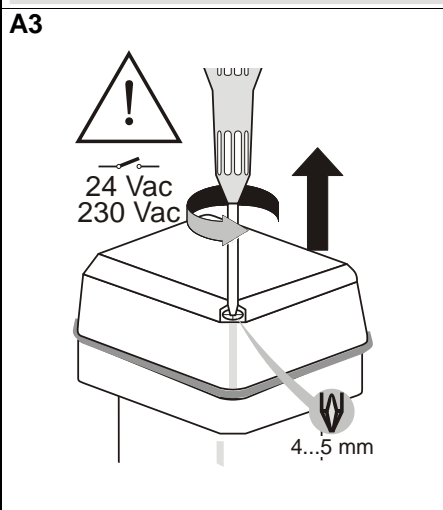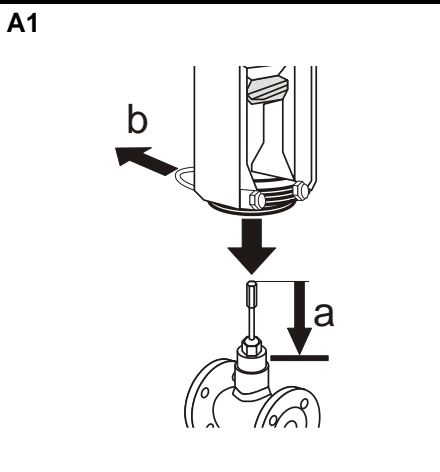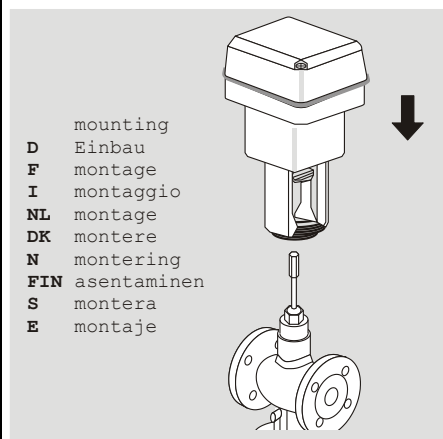

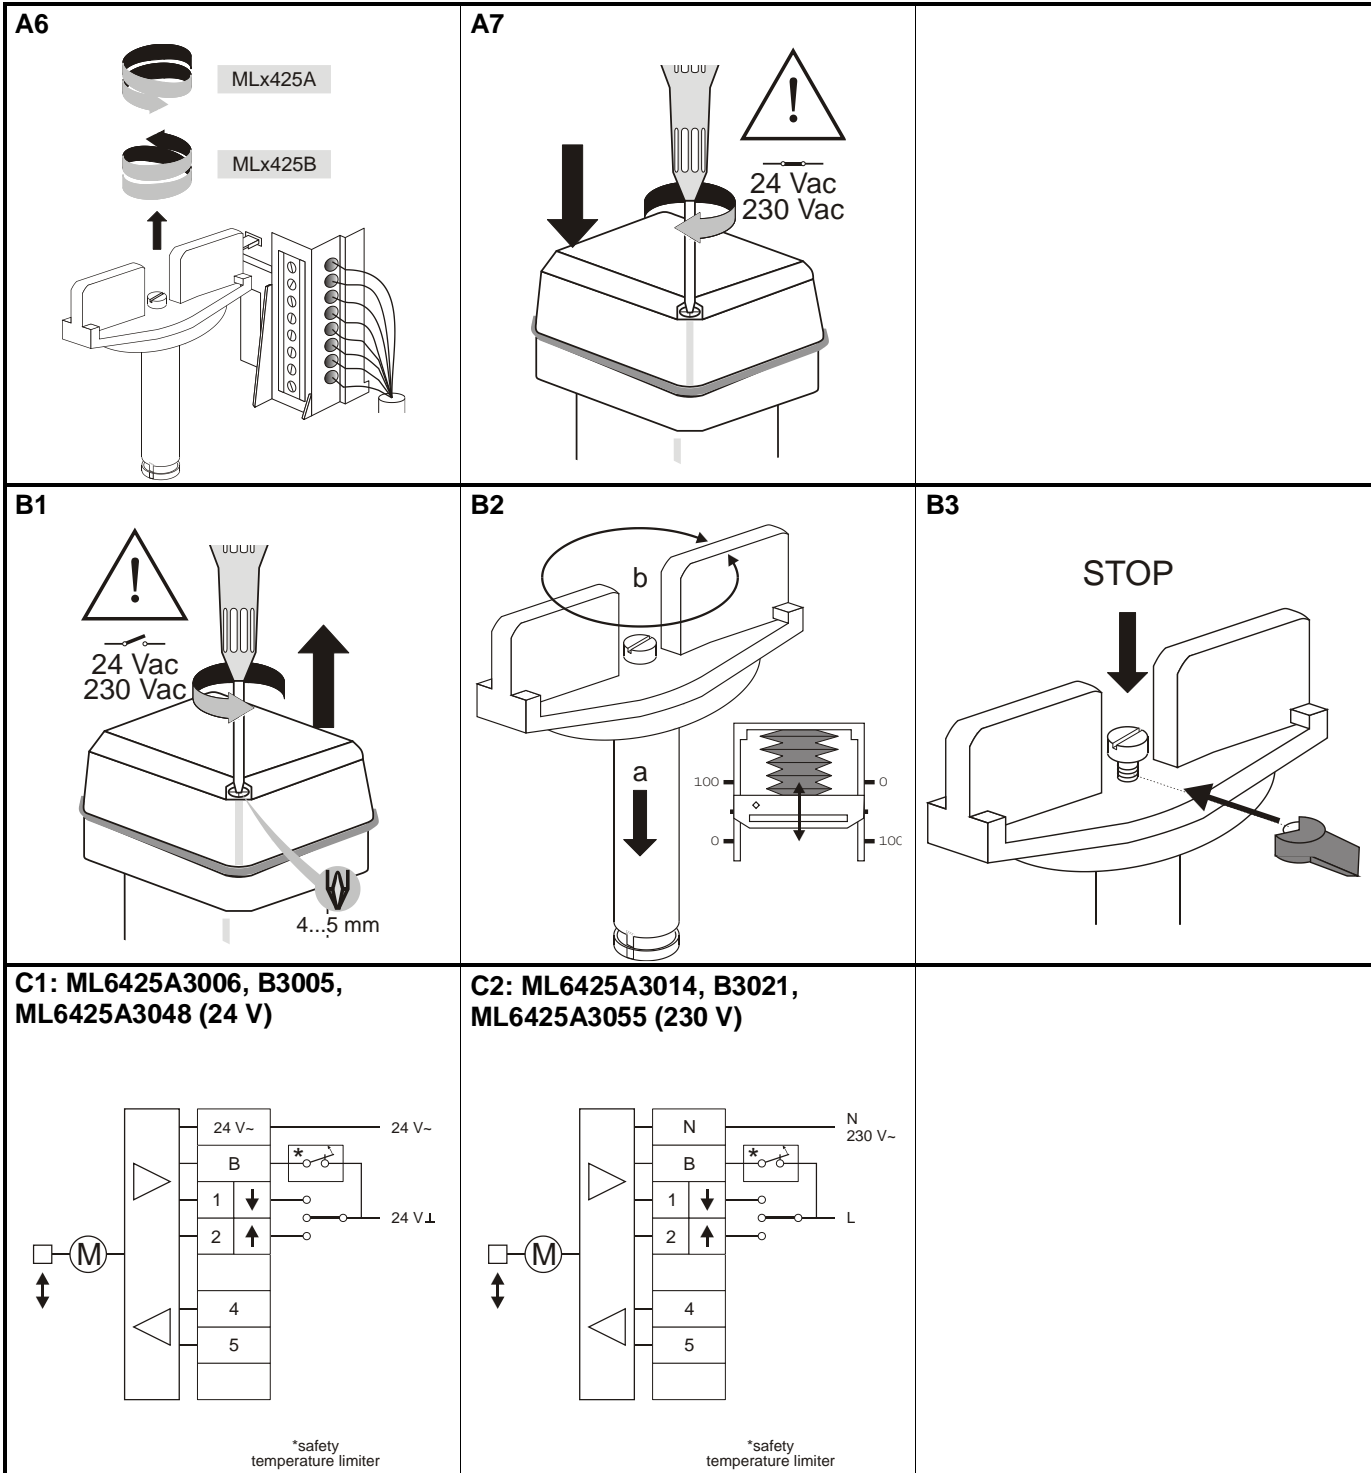

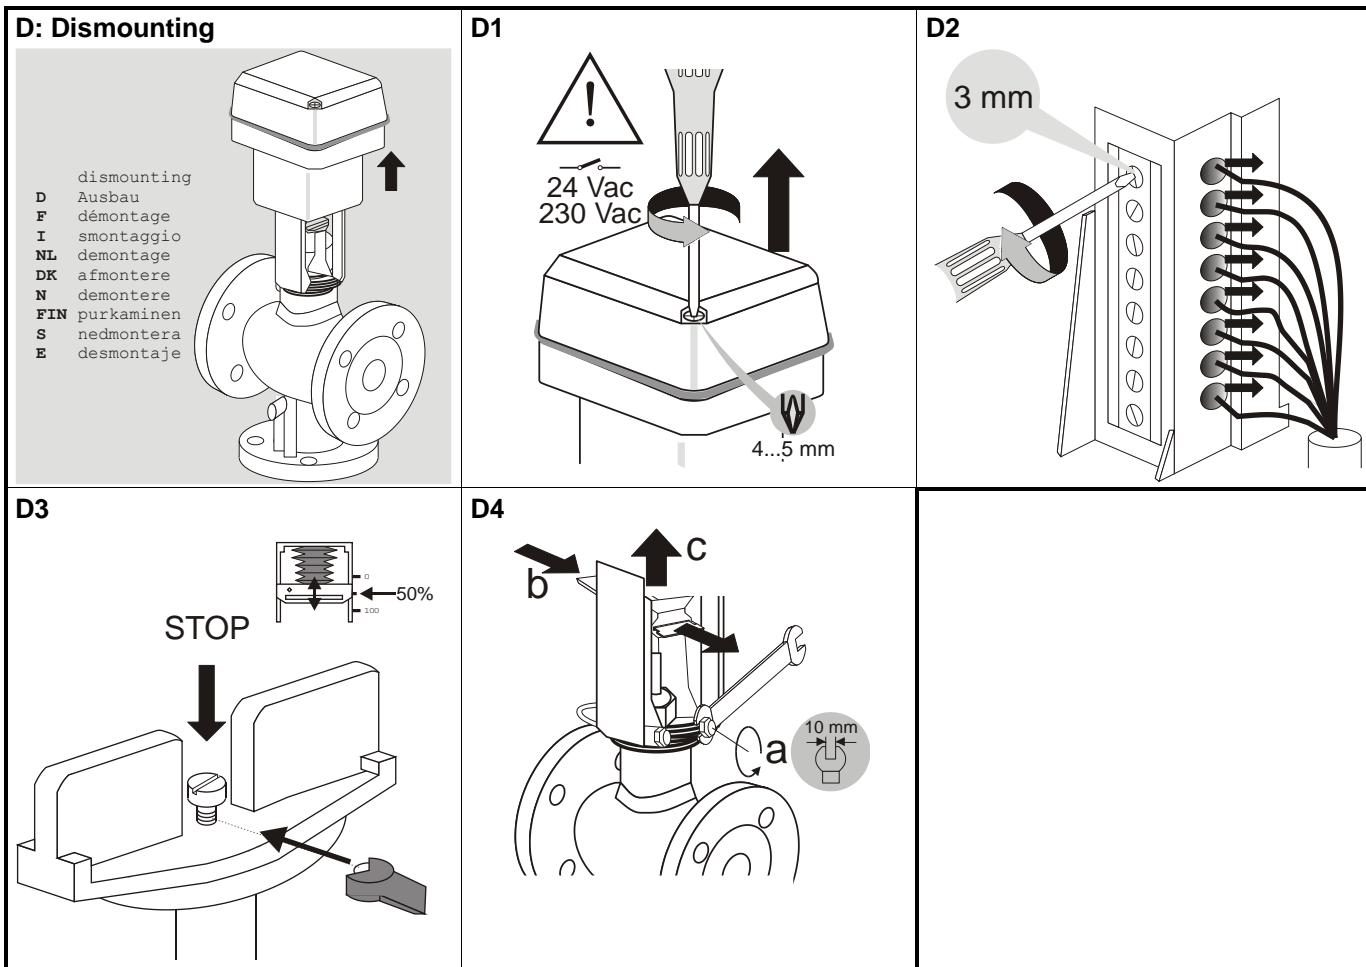

Home and Building Technologies

Honeywell GmbH
Böblinger Strasse 17
71101 Schönaich, Germany

MU1B-0235GE51 R0821F

Subject to change without notice.